

Konfiguracja telefonu Atcom AT-530



SCHEMAT DZIAŁANIA:



Krok 1

Podłącz telefon w przedstawiony sposób. **Zasilanie podłącz jako ostatnie.**

Uwaga!

Zasilanie podłącz jako ostatnie.

Do gniazda „PWR” podłącz wtyczkę od zasilacza, a zasilacz podłącz do prądu.



Krok 2

Uruchom przeglądarkę internetową i jako adres strony wpisz:

A

jeśli telefon jest podłączony do tego samego routera co komputer, to:

Sprawdź adres IP telefonu:

1. Naciśnij na telefonie klawisz Sysinfo
2. Odczytaj adres IP, który powinien wyświetlić się pod napisem --DHCP--
(w razie konieczności naciśnij klawisz Sysinfo ponownie)


B

jeśli komputer jest podłączony do gniazda LAN telefonu, to wpisz:

192.168.10.1

Krok 3

Po ukazaniu się strony logowania wpisz zarówno w polu Username, jak i Password: **admin** i naciśnij logon.

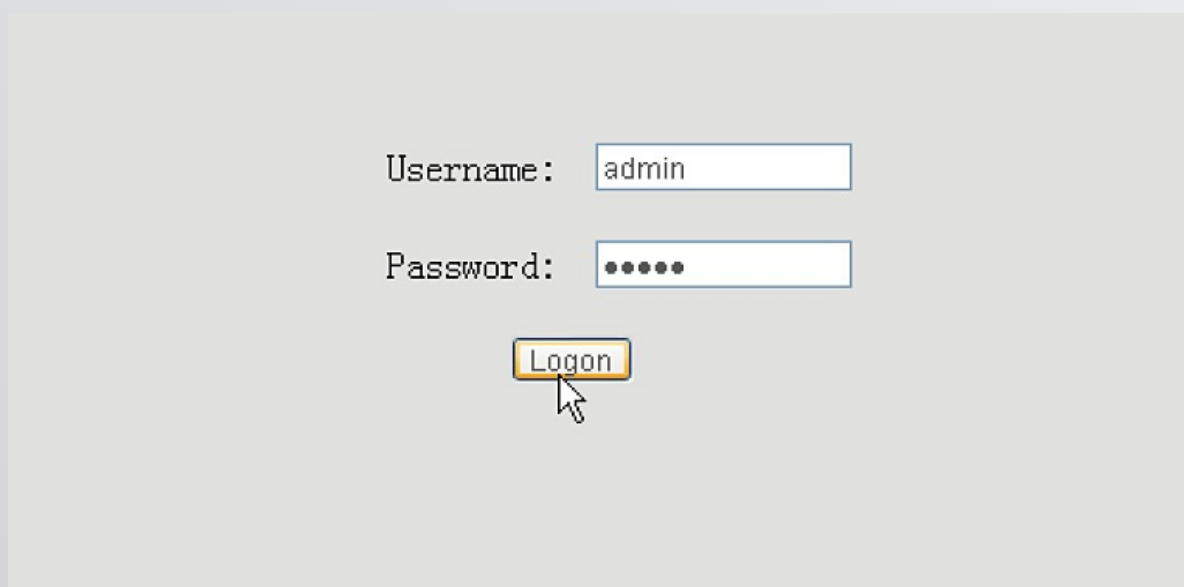

Username:

Password:

Krok 4

Wejdź w zakładkę VoIP -> SIP Config i wpisz odpowiednie ustawienia, zgodne z poniższymi. Zatwierdź przyciskiem "Apply".

The screenshot shows the 'IP Phone' configuration page. On the left is a navigation menu with categories: Current State, Network, VoIP, Advance, Dial-peer, Config Manage, Update, and System Manage. The 'VoIP' category is selected and contains sub-items: SIP Config, IAX2 Config, and Advance. The 'SIP Config' sub-item is highlighted with a red circle. The main content area is titled 'IP Phone' and 'SIP [Registered] Configuration'. It contains a table of configuration parameters with input fields and dropdown menus. The 'Enable Register' checkbox at the bottom left is checked and circled in red. An 'Apply' button is located at the bottom center.

SIP [Registered] Configuration			
Register Server Addr	<input type="text" value="sip.halonet.pl"/>	Proxy Server Addr	<input type="text"/>
Register Server Port	<input type="text" value="5060"/>	Proxy Server Port	<input type="text"/>
Register Username	<input type="text" value="nazwa konta"/>	Proxy Username	<input type="text"/>
Register Password	<input type="text" value="haslo"/>	Proxy Password	<input type="text"/>
Domain Realm	<input type="text" value="sip.halonet.pl"/>	Local SIP Port	<input type="text" value="5060"/>
Phone Number	<input type="text" value="nazwa konta"/>	Register Expire Time	<input type="text" value="60"/> seconds
Display Name	<input type="text"/>	User Agent	<input type="text" value="Voip Phone 1.0"/>
Encrypt Key	<input type="text"/>	Server Type	<input type="text" value="common"/>
DTMF Mode	<input type="text" value="DTMF_RFC2833"/>	RFC Protocol Edition	<input type="text" value="RFC3261"/>
Detect Interval Time	<input type="text" value="60"/> seconds	Transport Protocol	<input type="text" value="UDP"/>
<input checked="" type="checkbox"/> Enable Register			